



DOOR SIGN

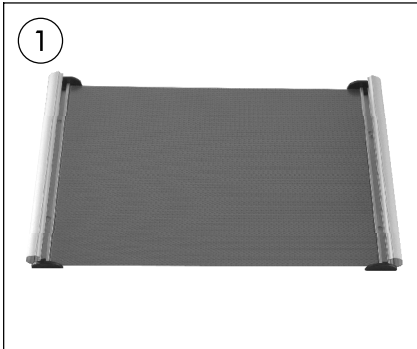

- Open all profiles upwards.
- Alle Profile in der Pfeilrichtung öffnen.
- Kenar profilleri açın.

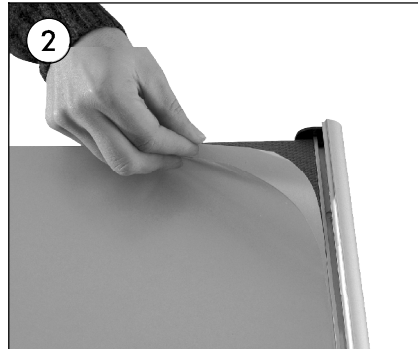

- Take-off the anti-reflex cover.
- Place in the poster.
- Antireflex -Schutzfolie abheben.
- Poster einlegen.
- Anti-reflex korumayı kaldırın.
- Posteri yerleştirin.



- After placing the cover back on the poster, close the profiles downwards.
- Antireflex-Schutzfolie auf Poster legen und die Seitenprofile in Pfeilrichtung zuklappen.
- Anti-reflex korumayı posterin üzerine yerleştirerek kenar profilleri kapatın.

